


Installation Guide for HF/MF feeder WIREKIT-02 (992001-P)

457-0009.01

Package content:

ITEM NO.	Description	QTY.
1	Tube clamp Ø40	1
2	Shackle, 5/8"	1
3	KUM feeder cable 8m	1
4	Isolator for wire, 9kN, 100kV	1
5	Connector, Cable clamp 35-50mm ²	1
6	Connector, Cable clamp 16-25mm ²	1
7	Wire clamp Ø6	2
8	Thimble Ø7	2
9	Shackle, 1"	2



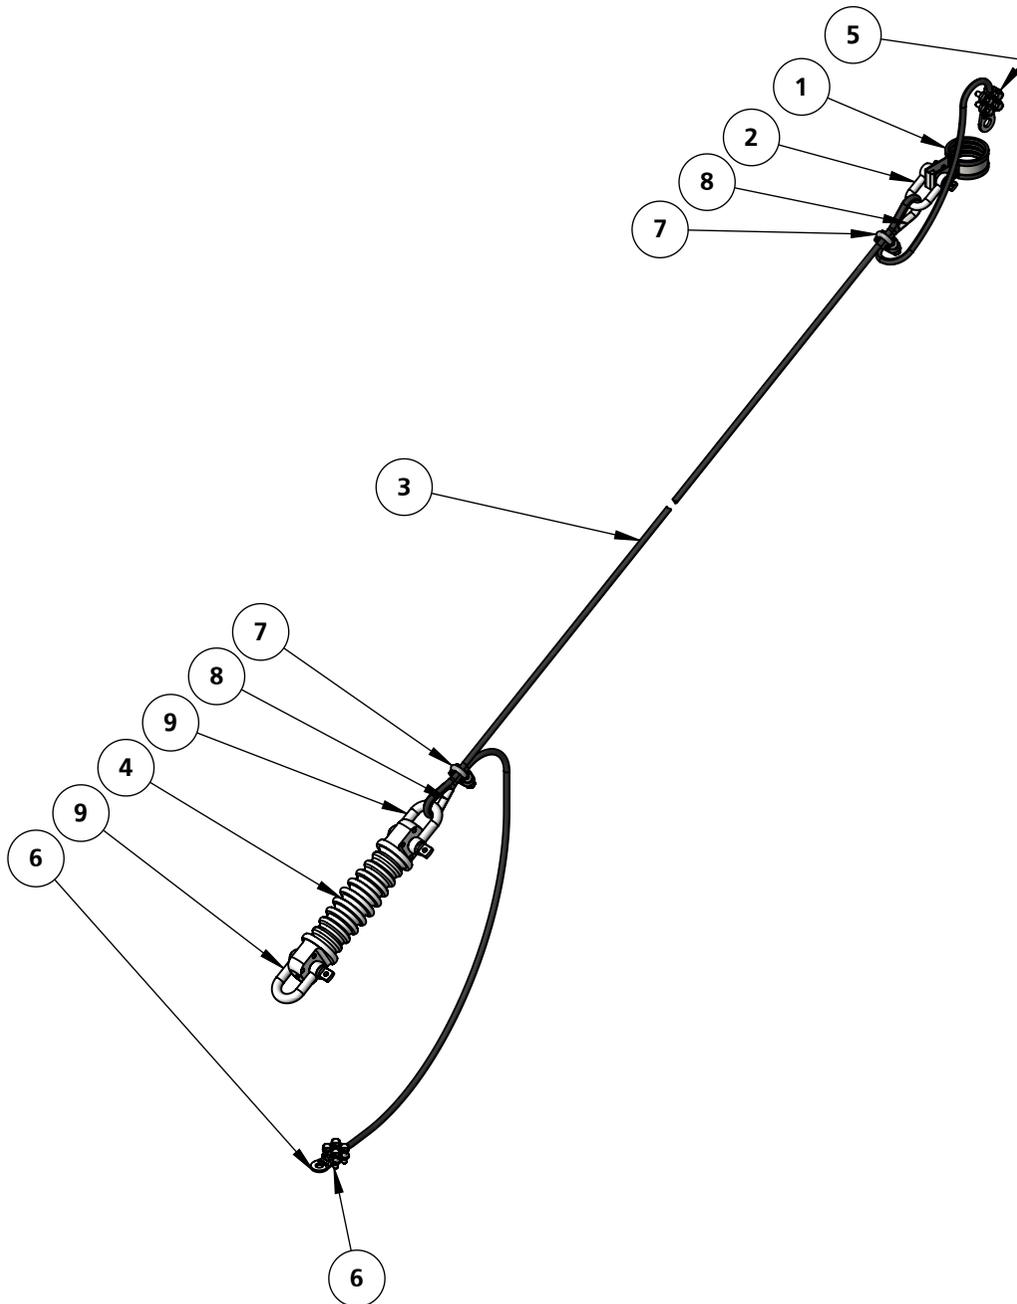


Installation Guide

This is a guide only and does not form any contract or warranty

This drawing and the contents herein are property of AC Antennas A/S and is strictly confidential. Complete or partly reproduction of this drawing or construction of any of the parts shown herein is strictly forbidden without prior written authorization by AC Antennas A/S.

Recommended cable stripping:



The two wire clamps on the connector needs to be flipped in order to make a secure connection to the cable

4: Mount the cable clamp pointing upwards to avoid water ingress in the cable and tighten the two nuts by 3Nm

1: Mount the tube clamp 50mm from the antenna screw

2: Mount the shackle & thimble and feed the wire through. Use wire (not included) to lock the shackle

3: Use anti-sieze on the bolt and fix the nut by max 1Nm

5: Mount the wire clamp leaving slack cable to connect the antenna

! Keep as much distance as possible between the cable and grounded objects

DETAIL A SCALE 1 : 5

7: Feed the cable through the thimble & mount the wire clamp. The cable pulled taut (straight but not tight)

! Keep as much distance as possible between the cable and grounded objects

6: Mount the two last shackles & Isolator to a suitable post

DETAIL B SCALE 1 : 5

8: Finally the cable clamp must be connected to the antenna tuner max 1m from the wire isolator with a slack cable

